

1

1. Ensure the metal braces are firmly clicked in place at each end to maintain structural support when the Henge is stationary or being moved.
2. Ensure all castor breaks are in the up position for moving Henge and engaged in the down position when parked to prevent accidental movement.

